 



Ersatzteile




Art.-Nr. 03 0613
Kabinenhaube

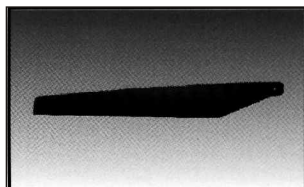

 
Art.-Nr. 03 0614
Hauptrotorblätter oben

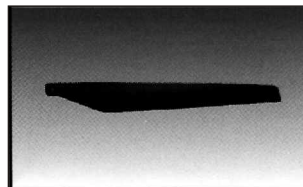

 
Art.-Nr. 03 0615
Hauptrotorblätter unten

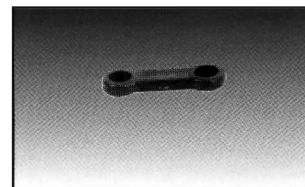


Art.-Nr. 03 0616
Steuerstange

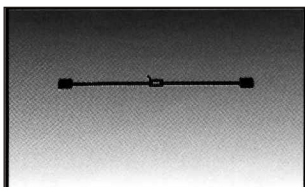 


Art.-Nr. 03 0617
Stabilisatorstange

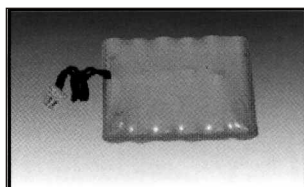 


Art.-Nr. 03 0618
Akkus

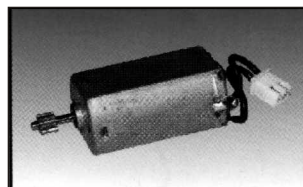 


Art.-Nr. 03 0619
Hauptmotor

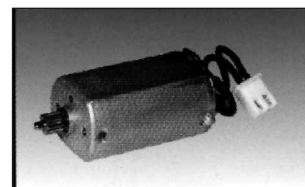 


Art.-Nr. 03 0620
Heckmotor

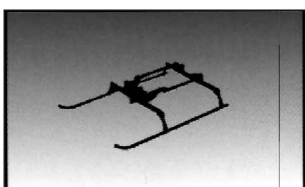 

Art.-Nr. 03 0621
Landegestell

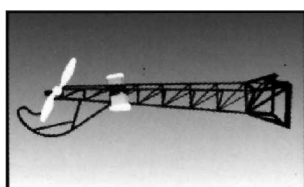 


Art.-Nr. 03 0622
Heckausleger

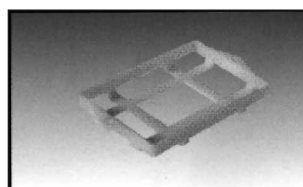 


Art.-Nr. 03 0623
Akkuhalterung



 Art.-Nr. 03 0633
Empfangselektronik 27MHz

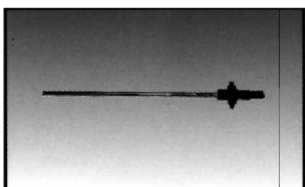


Art.-Nr. 03 0624
Hauptrotorwelle

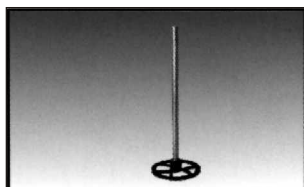 

Art.-Nr. 03 0625
Hauptrotorwelle -roht
mit Zahnrad




 Art.-Nr. 03 0626
Hauptzahnrad für obere
Rotor

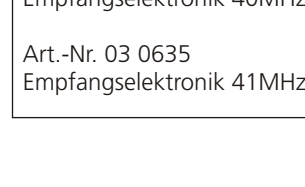


Art.-Nr. 03 0634
Empfangselektronik 40MHz

 
Art.-Nr. 03 0635
Empfangselektronik 41MHz

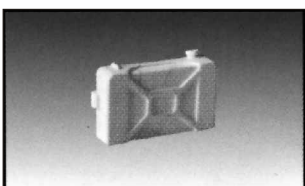


Art.-Nr. 03 0627
Tanktrappe

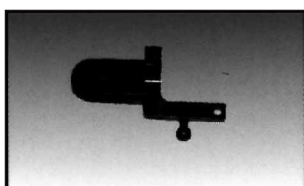 


Art.-Nr. 03 0628
Blatthalter

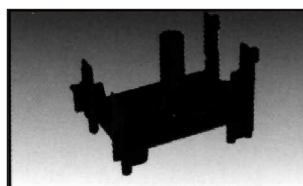 

Art.-Nr. 03 0629
Chassis

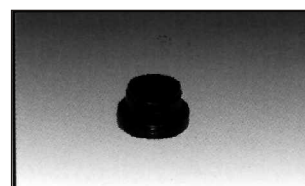 

Art.-Nr. 03 0630
Lagerhalter

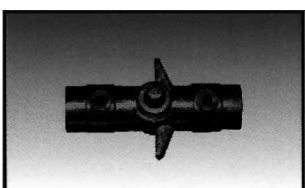 

Art.-Nr. 03 0631
Hauptrotorkopf mitte



Art.-Nr. 03 0632
Ladegerät