


HM 5#4

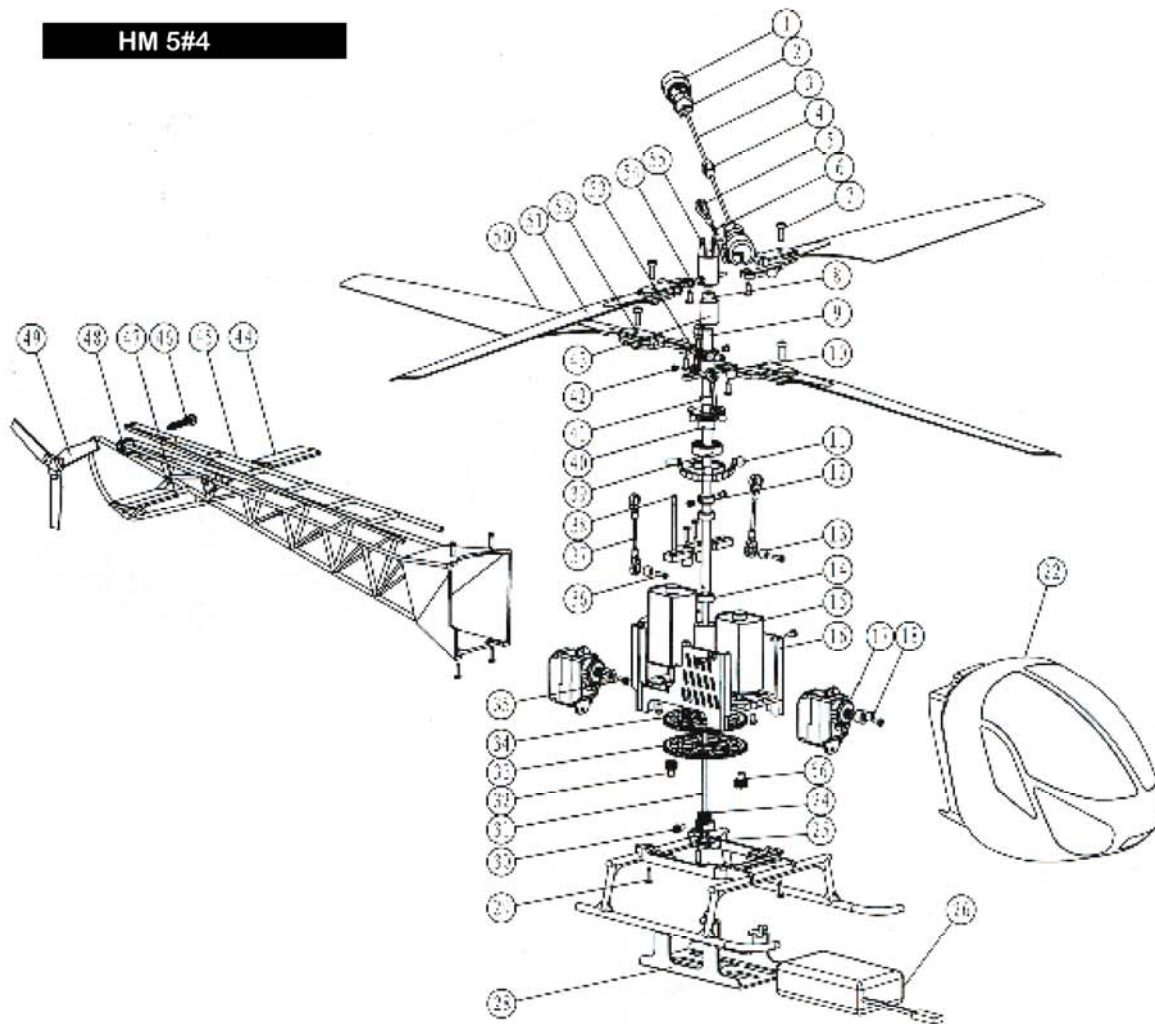

Part code	Description	Qty
001	Balance Shaft Cover	2
002	Balance Block	2
003	Flybar Rod	1
004	Flybar Rod Plastic Holder	1
005	Ball Link Driver	6
006	Double Ended Bolt	1
007	Socket Screw	4
008	Bearing	2
009	Hollow Shaft	1
010	Long Ball Linkage	2
011	Swashplate	1
012	Lock Sleeve	1
013	Aluminum Ball	2
014	Bearing	2
015	Motor	2
016	Main Frame A	1
017	7.6g Servo	2
018	Srvvo Bellcrank	2
019		
020		
021		
022	Canopy	1
023		

Part code	Description	Qty
024	Small Shaft Lock Sleeve	1
025	Skid Landing Gear	1
026	Battery	1
027		
028	Battery Box	1
029	Cross Recessed Pan Head Tapping Screw	6
030	Cross Recessed Pan Head Screw	3
031	Small Shaft	1
032	Motor Gear	1
033	Main Gear A	1
034	Main Gear B	1
035	Tapping Screw With Washer	8
036	Cross Recessed Pan Head Tapping Screw	6
037	Ball Link Rod 1	2
038	Swashplate Guide Frame	1
039	Bearing	1
040	Inner Swashplate	1
041	Copper Ball	1
042	Cross Recessed Pan Head Tapping Screw	6
043	Bearing	1
044	Horizontal Stabilizer 1	1
045	Tail Truss 2	1
046	Cross Recessed Pan Head Tapping Screw	1
047	Horizontal Stabilizer 2	1
048	Tail Truss 1	1
049	Tail Rotor	1
050	Main Blade 2	2
051	Main Blade 1	2
052	Main Blade Hoder	4
053	T-Shape Holder	1
054	Pilar Bolt	2
055	Flybar Rod Connector	1
056	Motor Gear 2	1